


1. Apply protective tape to the spoiler mount locations and in the center of the trunk lid.
2. Mark the exact center of the trunk lid.
3. Measure 360 mm from the center of the tailgate in both directions. The designated point will be the center of the spoiler mount. Place the spoiler mount here and mark the screw holes.
4. Drill holes in the marked places.
5. Drill holes on both sides of the trunk lid.



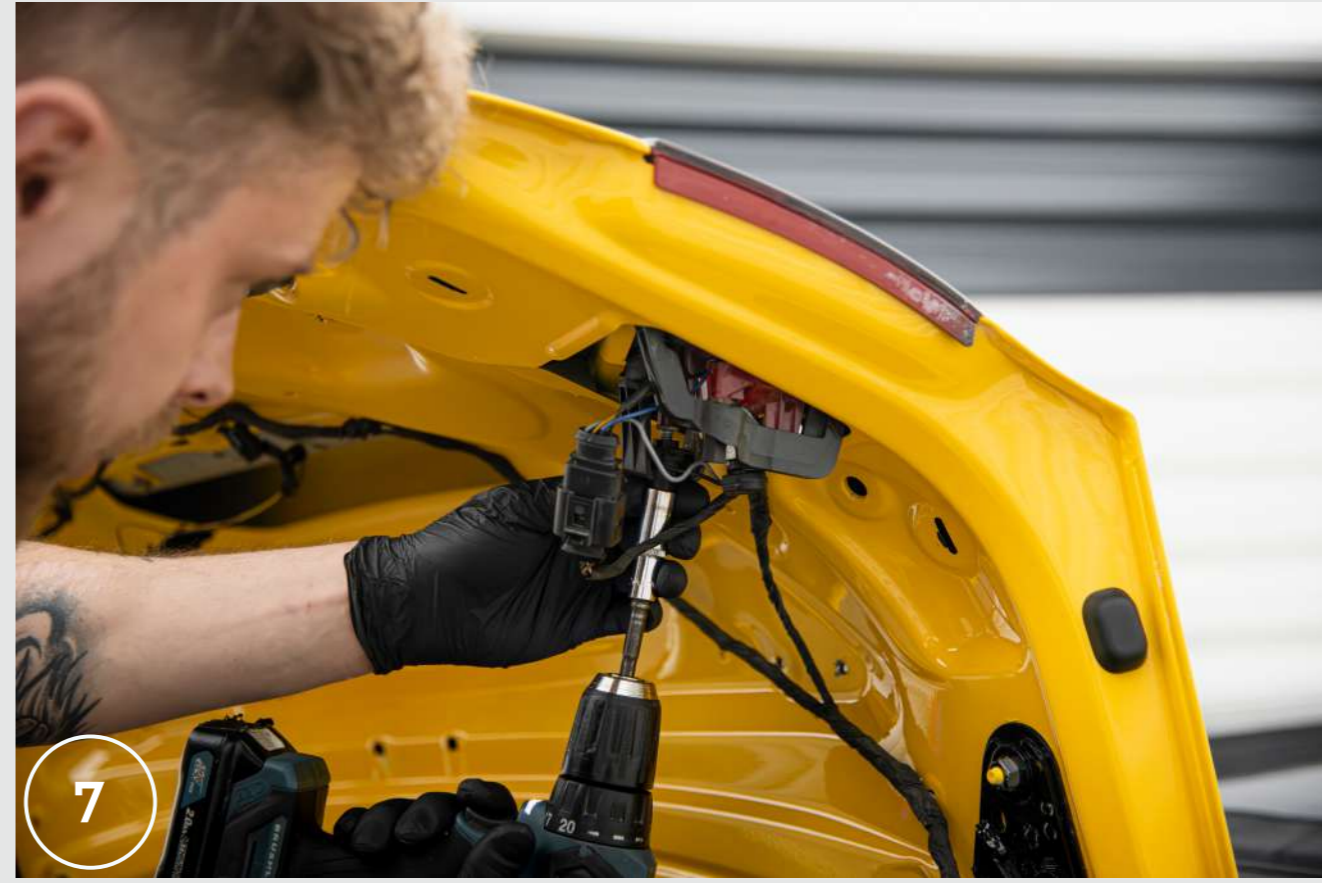

6. On the right side, place a gasket with an additional hole on the drilled holes. Mark this hole and drill.

7. Remove the lamp mount.



8. Using a long drill, drill holes so that they go through the trunk lid.

9. Use a hole saw to enlarge the drilled holes.

10. Protect exposed sheet metal elements against corrosion.

11. Place the pass-through seal in the additional hole.



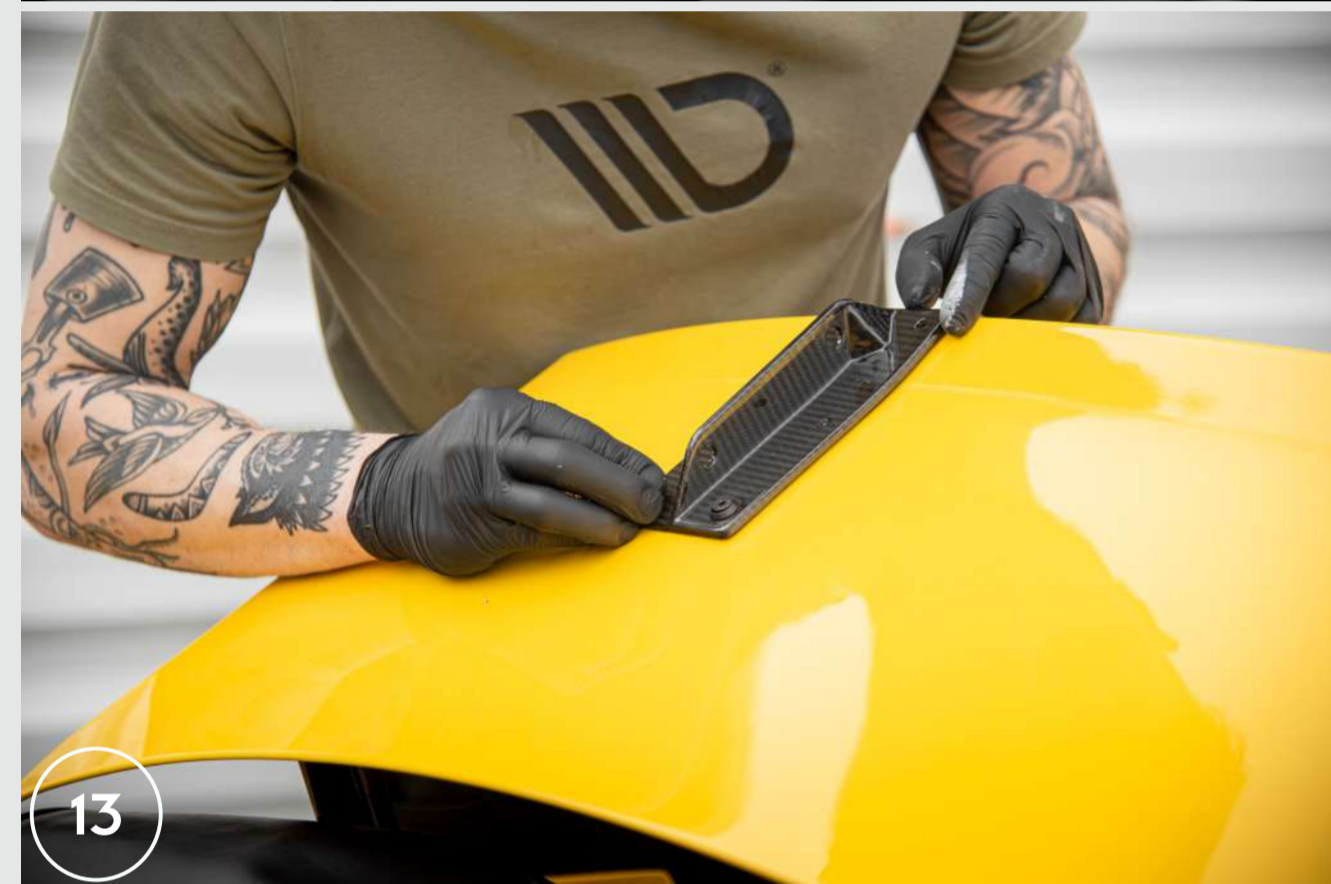
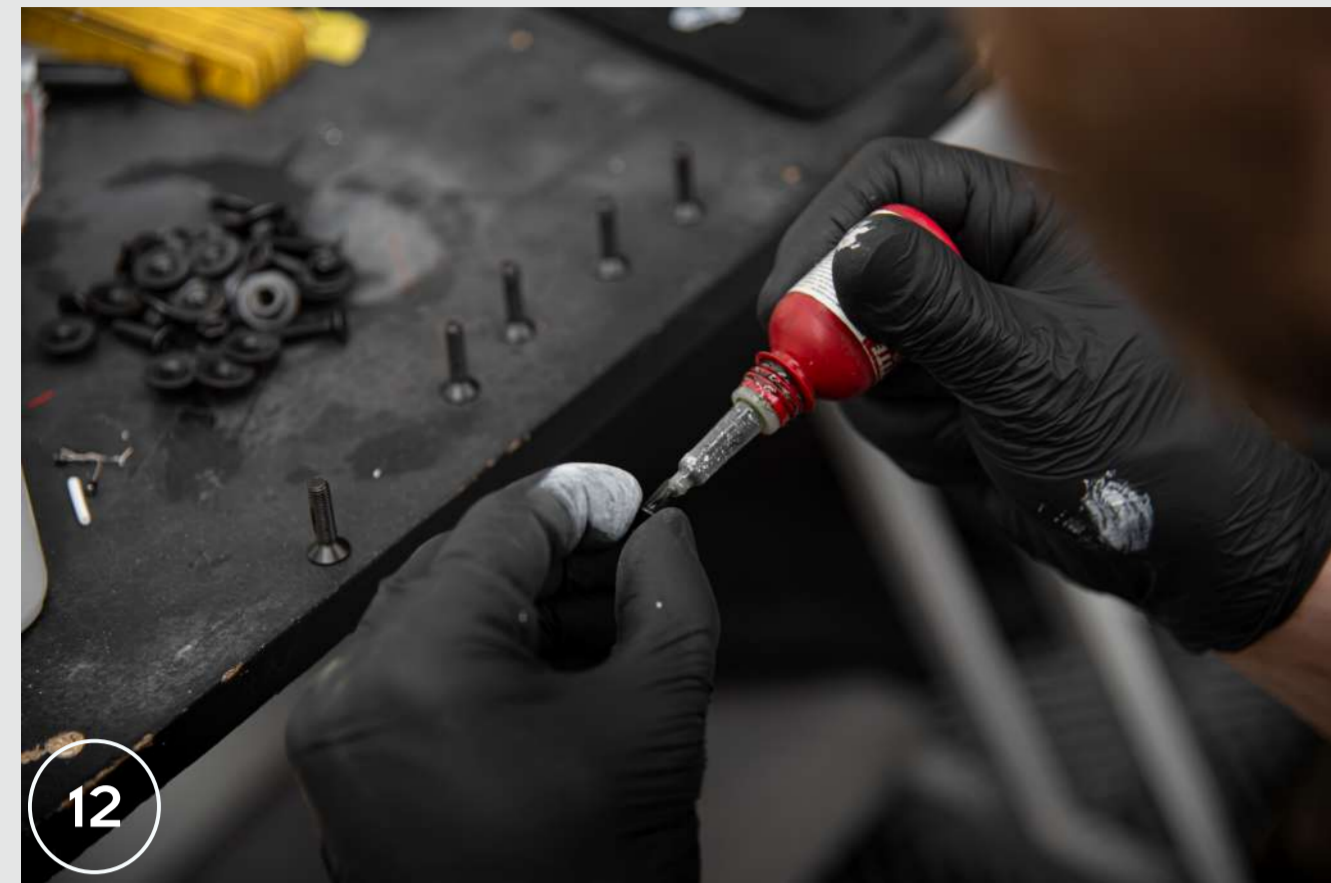


12. Apply anti-unscrewing glue to the threads of the mounting screws.

13. Remove the securing tape and place the seals and spoiler mounts on the holes in the trunk lid.


14. Screw the spoiler mounts to the trunk lid.

15. In place of the trunk lid reinforcements, place the nuts for the mounting screws on the inside of the trunk lid.

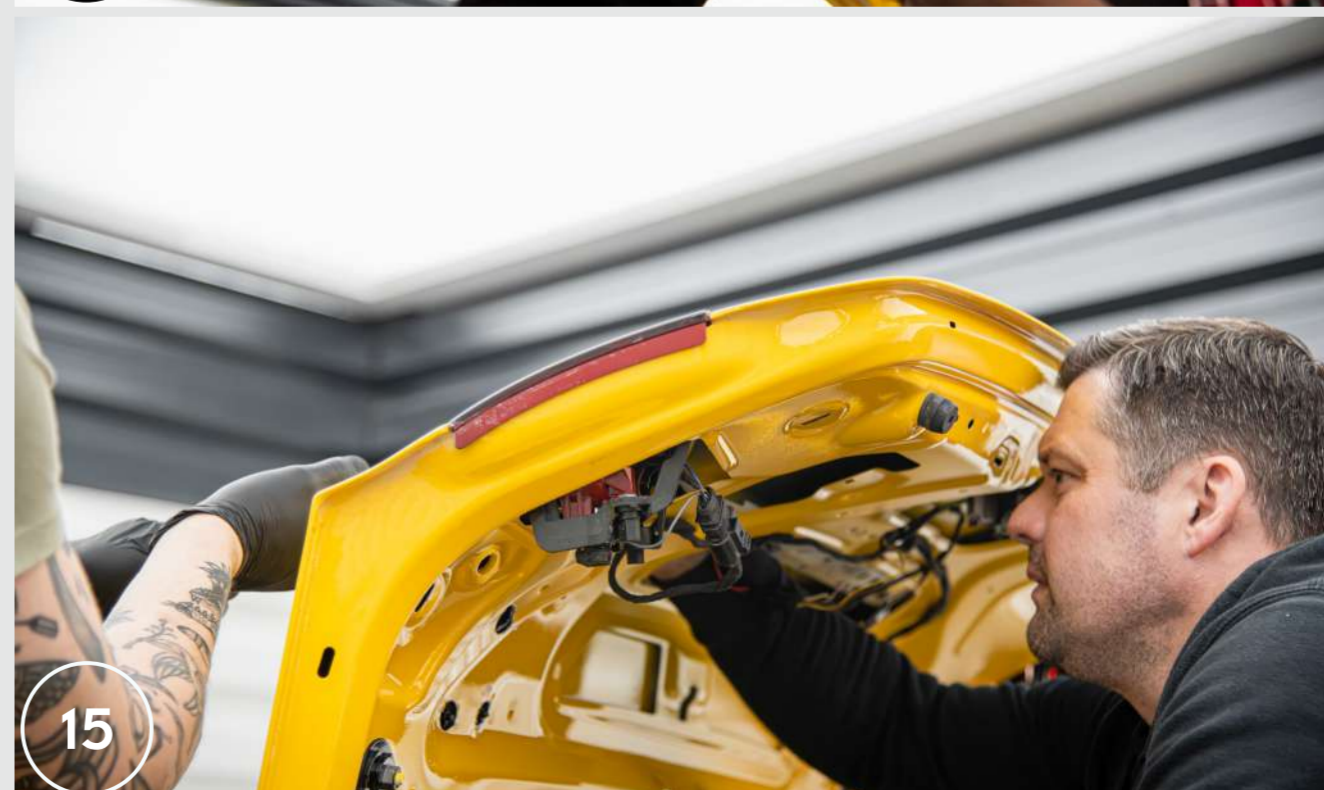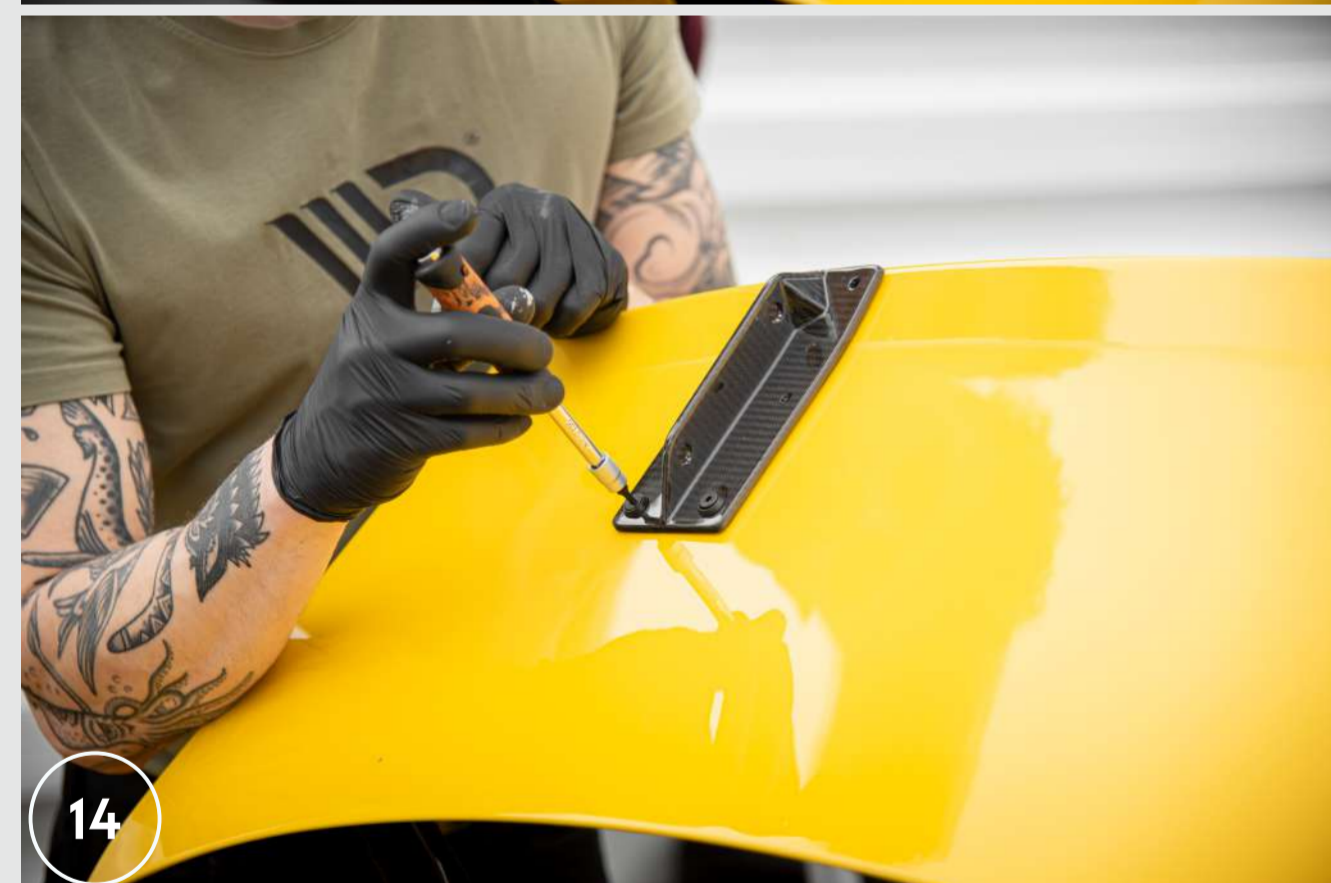



16

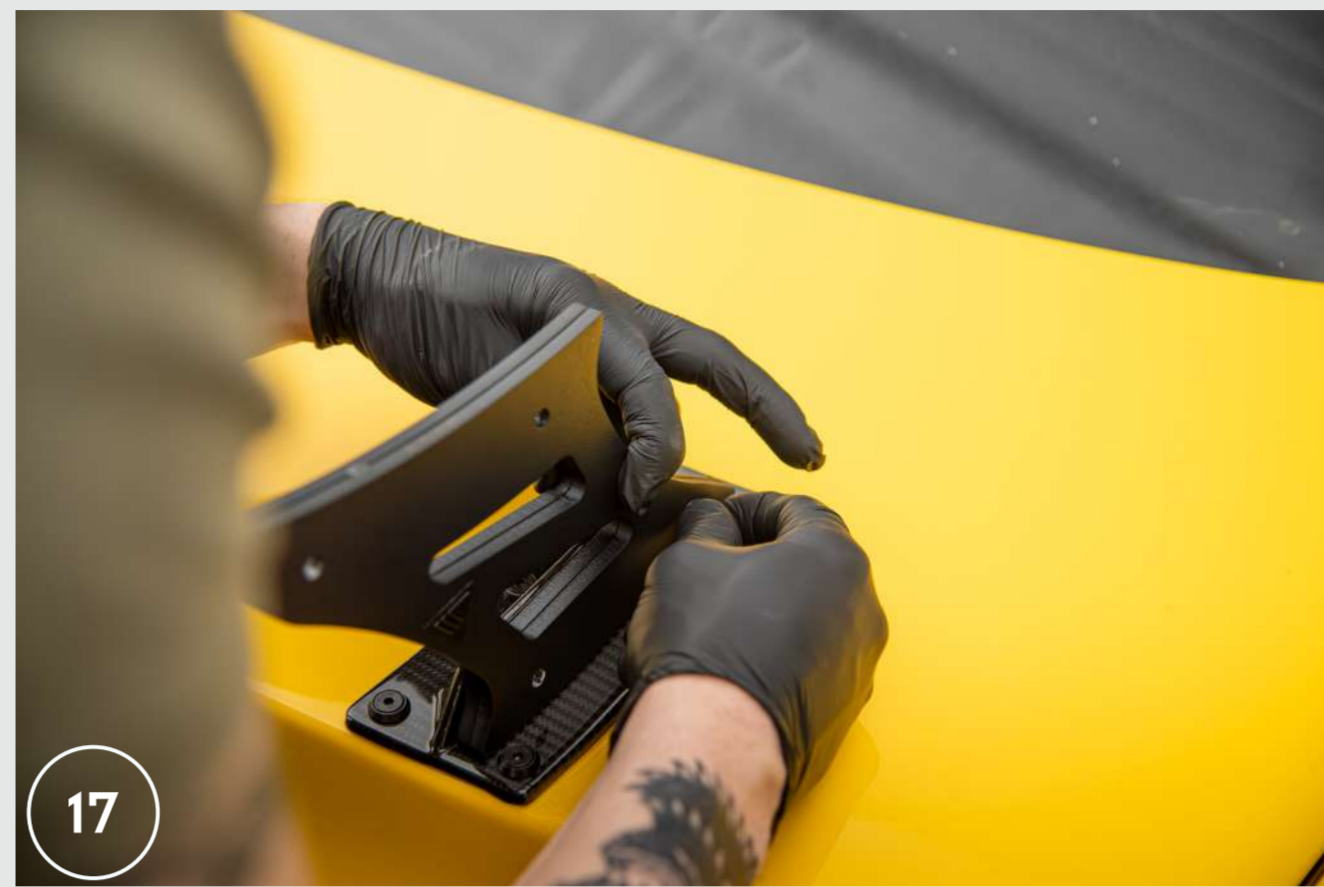

17



17

16. Screw the spoiler mounts on both sides of the trunk lid.

17. Place the spoiler bracket on the outside of the spoiler mount. Place the nuts and mounting screws in the holes.

18. Tighten the mounting screws.



18



18

If you have any questions about assembly process or our product you can contact our Customer Service by email sales@maxtondesign.eu or by phone [+48 14 307 06 04](tel:+48143070604)



Maxton Design



MaxtonDesignOfficial



Maxtondesign_official



MaxtonOfficial