









9 Adjoin extension to the bonnet with red stripe outside

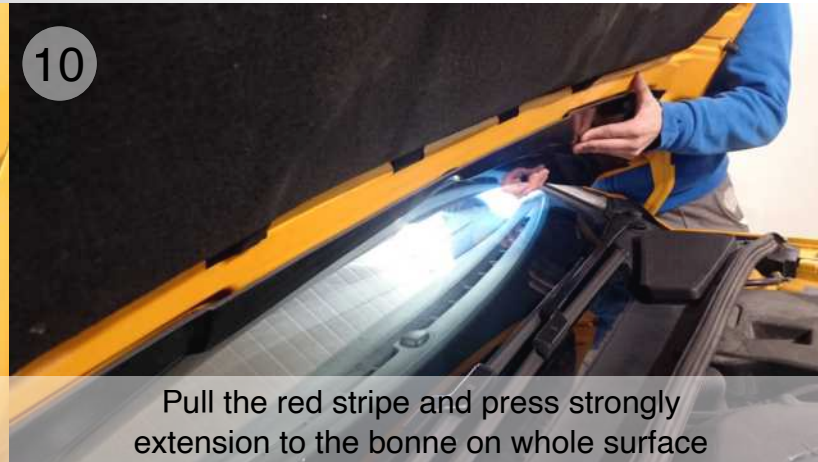

10 Pull the red stripe and press strongly extension to the bonnet on whole surface

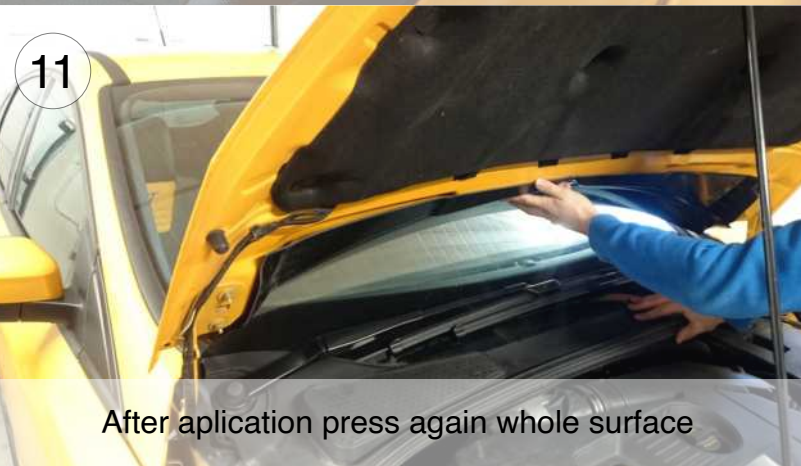

11 After application press again whole surface



12 Installation finished

1. Open bonnet and clean it precisely
2. Insert bonnet extension on place
3. Line Up bonnet and extension
4. Close bonnet and check adjoining to the bonnet
5. Use 3M degreasing cloth included
6. Clean whole adjoining surface
7. Clean precisely whole surface where 3M tape and glue adjoins bonnet
8. Tear off around 3-4cm of red securing stripe and add glue
9. Adjoin extension to the bonnet with red stripe outside
10. Pull the red stripe and press strongly extension to the bonnet on whole surface
11. After application press again whole surface
12. Installation finished



ABS Material

