


Street Pro Front Splitter
Volkswagen Golf Mk7 R
Assembly Instruction

- 1.Remove the bumper from the car.
- 2. Prepare the bumper, splitter, reinforcing insert and assembly kit with the necessary tools.
- 3. Align the splitter with the bumper.
- 4.Use screws to attach the splitter to the bumper on both extreme sides.
- 5.Place the reinforcing insert on the inner part of the bumper.

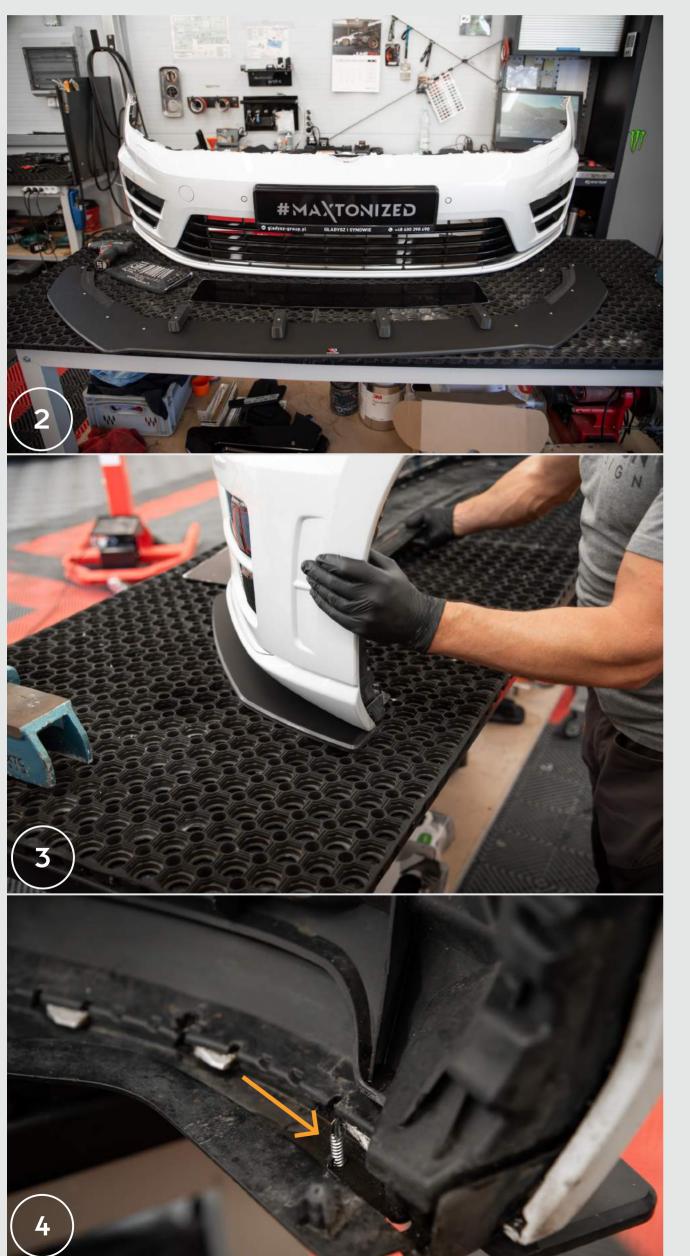






## Video assembly instructions



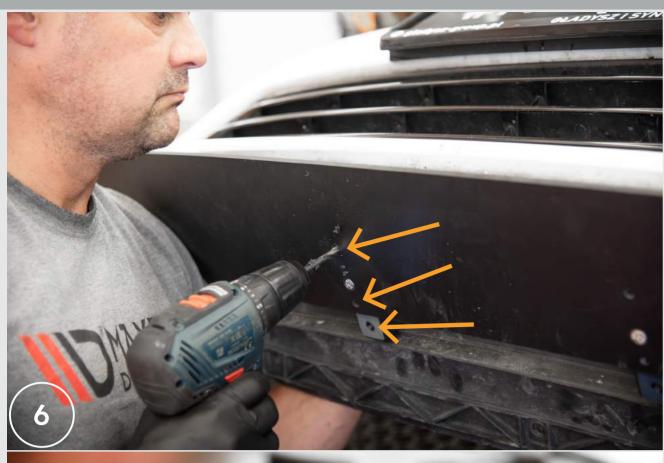









- 6.Drill through the original holes in the splitter to open through the bumper and the reinforcing insert.
- 7. Insert the bolts into the drilled holes. Remove the screws securing the splitter to the bumper.
- 8. Put washers and nuts on the bolts from the inner side of the bumper.
- 9. Tighten the bolts tightly.
- 10. The mounting bolts should be in each hole marked on the splitter - a total of 18 bolts.
- 11. Assemble the bumper to the car.

